



Cr-48 Chromebook SSD Replacement

Written By: Athar





TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove the Battery






- Slide the switch on the bottom of the laptop until the battery pops out.
- Once the battery pops out, you can remove it.

Step 2 — Remove Rear Rubber Feet

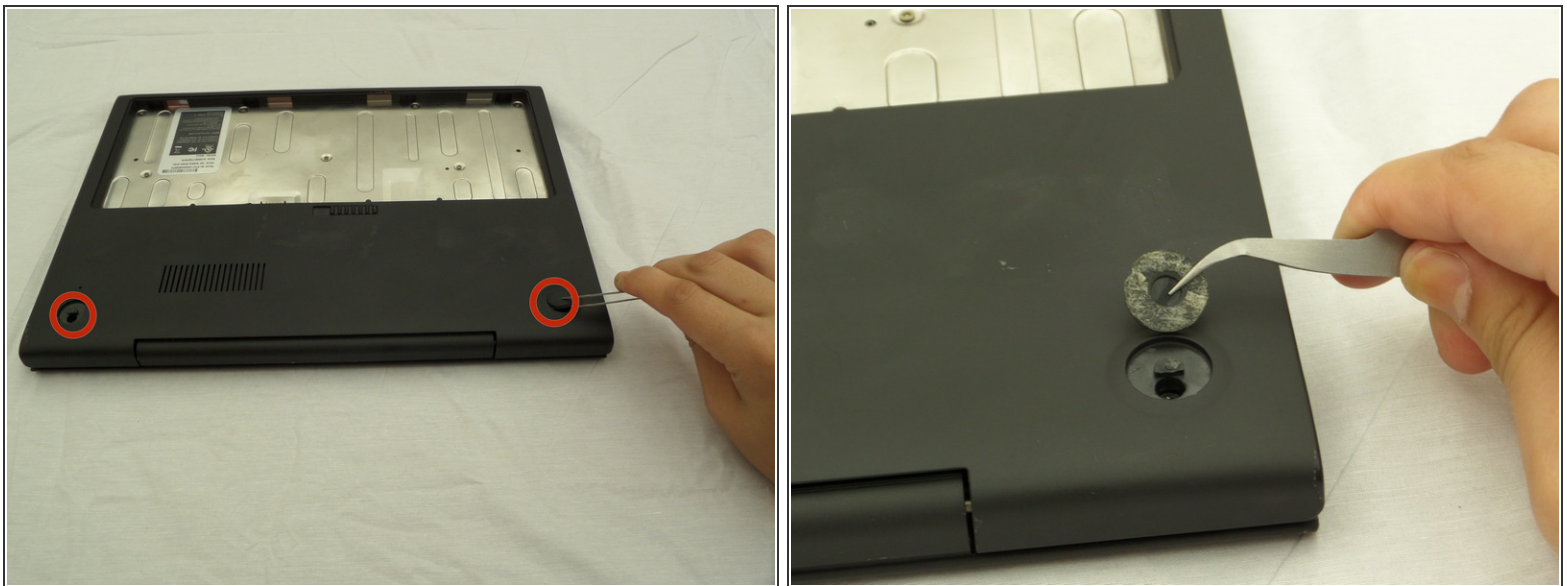




- Using forceps or tweezers, remove the two rear rubber feet to expose two hidden screws.

Step 3 — Remove Screws

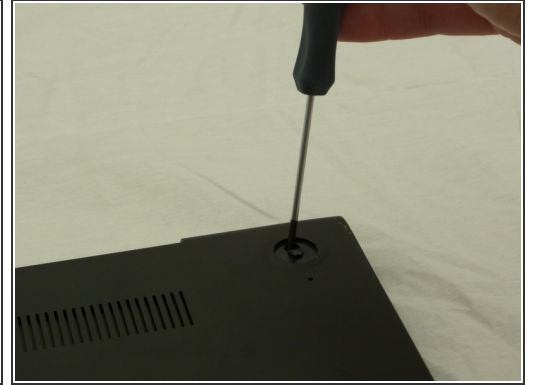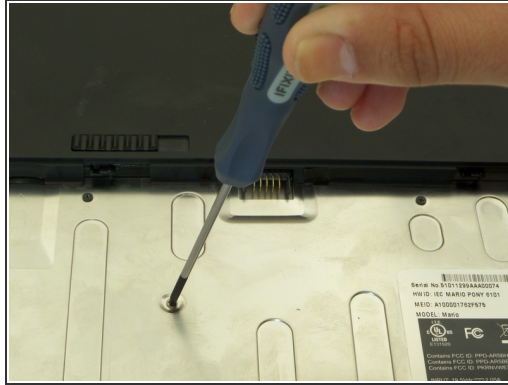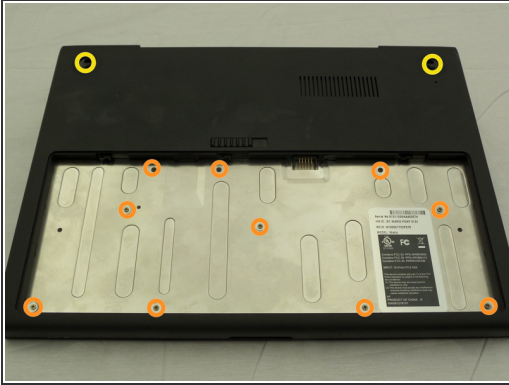




- Using a Phillips head #00 Screwdriver, remove a total of 12 screws:
 - 10 screws in the battery compartment.
 - size ph#00, approximately 3 mm long
 - 2 screws under the rubber feet previously removed
 - Size ph#00, approximately 4.5 mm long

Step 4

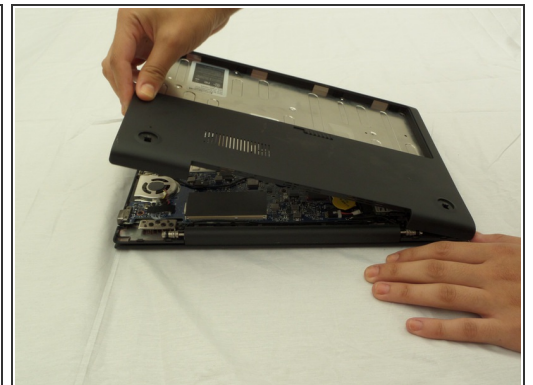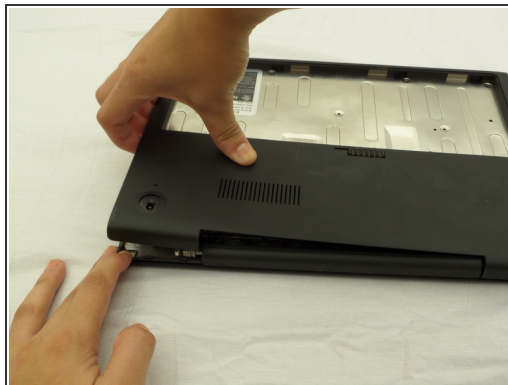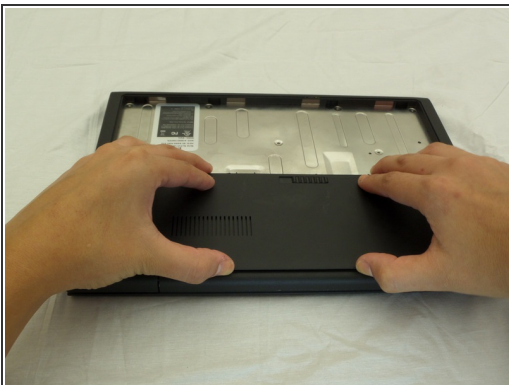



- Starting where the body of the laptop and the laptop screen meet, pry apart the lower case from the rest of the laptop.
- ⓘ The case is easier to remove when separating in a clockwise motion, as seen in the pictures.

Step 5 — Locate SSD and Remove Screw

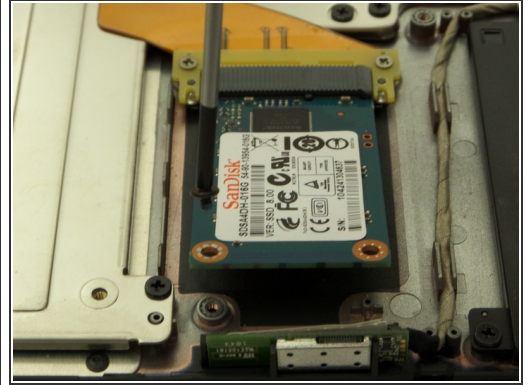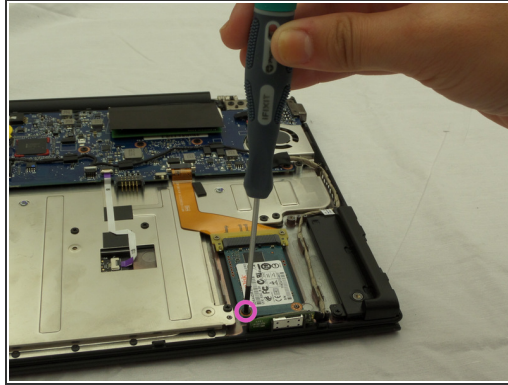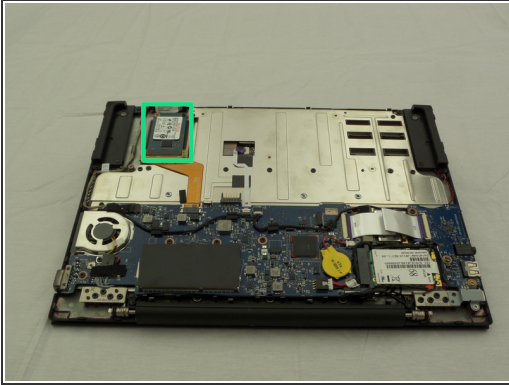

- Find the SSD located on a corner of the side directly opposite where the laptop screen and device body are connected.
- Remove one black screw on the SSD using a PH #00 screwdriver.
 - Size ph#00, approximately 3 mm long.
- ❗ Once unscrewed, the SSD will pop up from the device.

Step 6 — Remove SSD

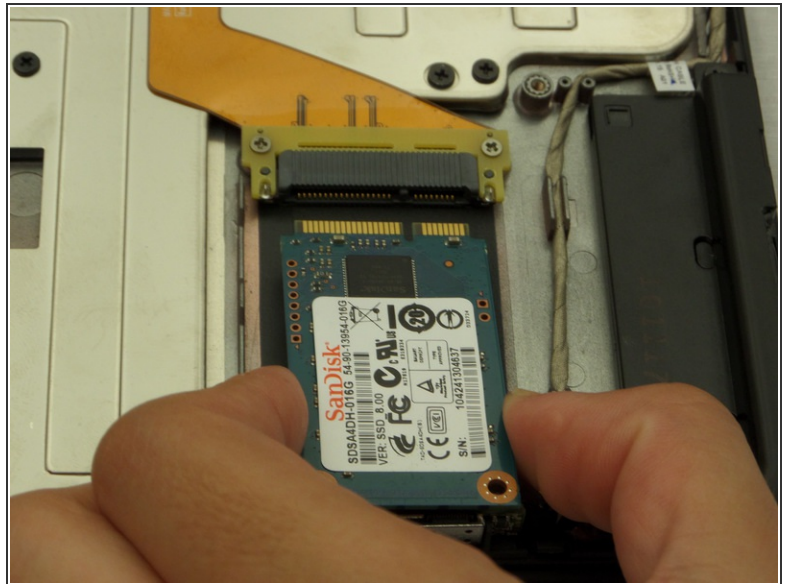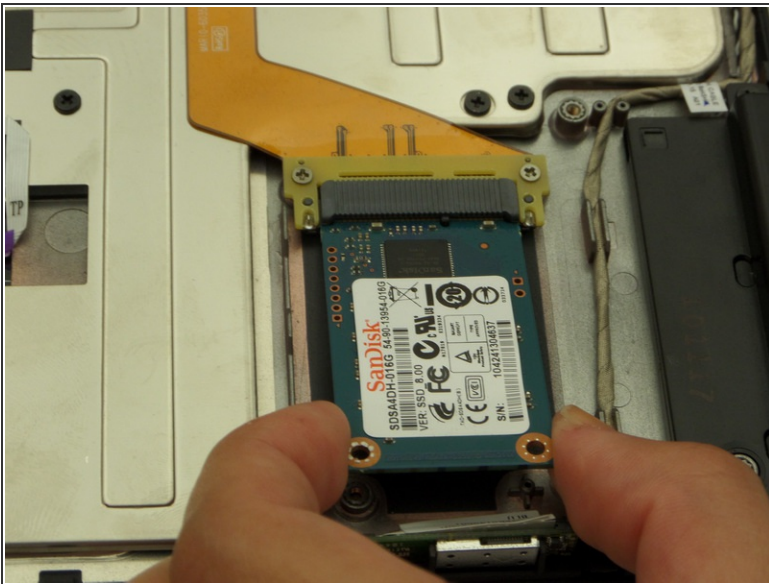

- Firmly grasp the SSD with two fingers slightly upwards and pull.

To reassemble your device, follow these instructions in reverse order.

